

# LAUNCH CONTROL

Launch control is enabled by selecting launch control on main setup in pot \aux input


Launch limits are set on output page

Launch rpm


Timing retard                      0 to 45 degrees

Fuel enrichment                    0 to 30 percent

Arm switch must be connected to pot plug

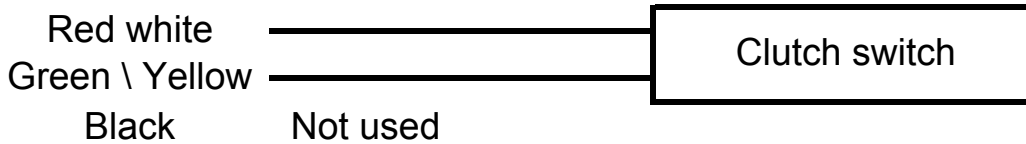

Two switches can be used in series to have a clutch switch and a dash or steering arm switch

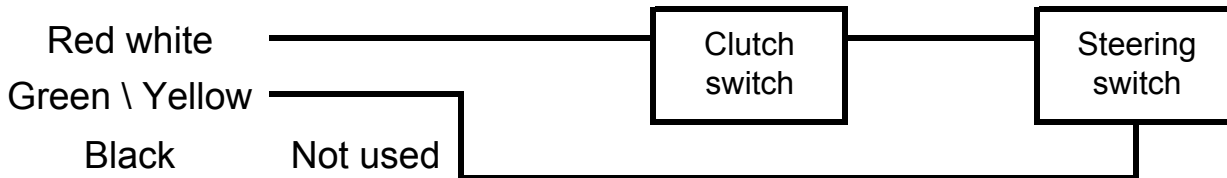

Switches must be normally open close to activate

Launch control operation can be verified on data page